

# ***Project Neon - Lightning Strike***

## ***Item # LS1001- Graphic Installation Instructions***

### Materials Needed for Application:

1. Application Squeegee (Included with kit)
2. Soft Cotton Towel (Lint-Free)
3. Masking Tape
4. Tape Measure

### 6. Spray Bottle


A 16 oz. misting bottle is ideal. Add two drops of Joy liquid dish soap and fill with warm water.



1. Clean all surfaces thoroughly using appropriate cleaners. Wax coats should be removed to insure proper adhesion of graphics.



2. Position graphics onto vehicle and align visually. Apply masking tape at the top of the graphic to act as a hinge.

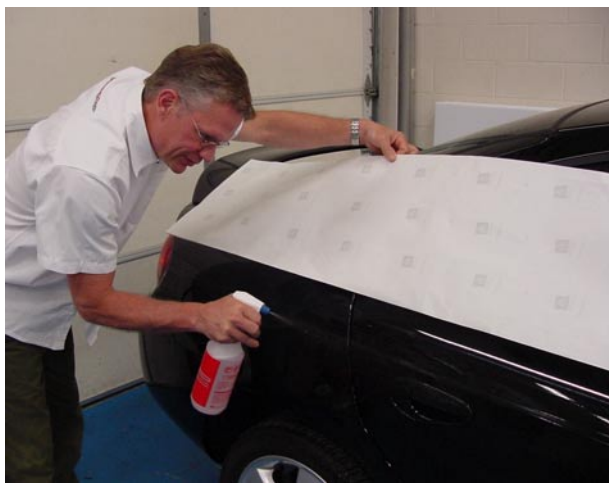

3. Flip graphic upward and out of the way. Using a spray bottle mixture of 16 oz. of water to two drops of Joy liquid detergent soap, spray the entire application area on the vehicle.



4. Remove the release liner from the back of the graphic to expose the adhesive side of applique.



5. Spray the exposed adhesive side with water/joy spray solution. Be sure to saturate entire area.



6. Flip graphic back onto vehicle surface and burnish water/joy solution from under decal. Work from the top down with even strokes and coverage.



7. Slowly remove premask covering to expose the graphic. Pull back at a 180 degree angle. The finished applique will keep its appearance for years.



8. Trim door seams and fuel cap area carefully using x-acto knife. Burnish graphic into seams as required.



Repeat above steps to complete the graphic installation. The finished applique will keep its appearance for years.

Got Questions? Ask The Pro's!

We are pleased to help you with the installation process. Just give us a call and we can guide you through the installation.

**Dealer Exclusives**  
**1-800-872-4614**